

## YT125G

## BRAKE ADJUSTMENT AND MODIFICATION

## BRAKE COVER FASTENERS


The fasteners which hold the disc brake cover together on 1980 Tri-Motos are not long enough; when the cover is hit by rocks or other objects, the fasteners may allow the cover to open. The factory has rectified this problem on the 1981 Tri-Moto, and a supply of improved fasteners is available to replace the ones on 1980 YT125Gs.

## AFFECTED MODELS

YT125G

## PROCEDURE

1. Hold the disc brake cover together, and remove the old fasteners.
2. Separate the two pieces of the new fastener, and install the grommet piece through both halves of the brake cover.
3. While holding the cover together, push the pin of the fastener all the way into the grommet.

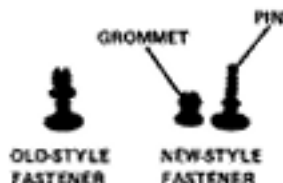

## PARTS INFORMATION

Ten improved fasteners have been enclosed with this bulletin. Additional fasteners may be ordered from Yamaha Parts Distributors Inc.

PART NUMBER	DESCRIPTION	DEALER COST
90269-06026-00	Brake Cover Fastener	

## WARRANTY

Warranty will cover the cost of the new fasteners for this modification; there is no warranty labor allowance.

## BRAKE ADJUSTMENT

**WARNING**

To adjust the Tri-Moto brake properly, be sure to follow the sequence of this procedure.

1. Completely loosen all the cable adjusters; there are two adjusters at the caliper lever and one at the handbrake lever.
2. Loosen the lock nut on the caliper adjusting screw, and turn the screw in until the disc locks.
3. Back the caliper adjusting screw out 1/4 turn or until there is a slight drag on the disc. Tighten the lock nut.
4. Adjust the brake-pedal cable to provide 10mm of free play at the pedal.



5. Adjust the handbrake-lever cable using the adjuster at the caliper. Set the lever free play to 15mm. The adjuster on the handlebar can be used to adjust free play to the operator's preference.

